








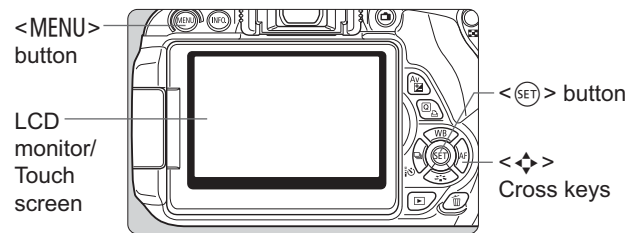
15

Quick Reference Guide and Index

Menu Operations - - - - -	p.370
Image-recording Quality - - - - -	p.371
 Picture Style - - - - -	p.371
 Quick Control - - - - -	p.372
Nomenclature - - - - -	p.373
Basic Zone Modes - - - - -	p.375
 Using the Built-in Flash - - - - -	p.375
Creative Zone Modes - - - - -	p.376
P : Program AE - - - - -	p.376
Tv : Shutter-priority AE - - - - -	p.376
Av : Aperture-priority AE - - - - -	p.376
AF: AF Operation - - - - -	p.377
 AF Point - - - - -	p.377
ISO: ISO Speed - - - - -	p.378
 Drive Mode - - - - -	p.378
 Live View Shooting - - - - -	p.379
 Shooting Movies - - - - -	p.380
Image Playback - - - - -	p.381


Quick Reference Guide

Menu Operations



1. Press the <MENU> button to display the menu.
2. Press the <◀▶> key to select a tab, then press the <▲▼> key to select the desired item.
3. Press <SET> to display the setting.
4. After setting the item, press <SET>.



Basic Zone Modes

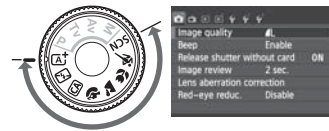

Movie Shooting




Creative Zone Modes

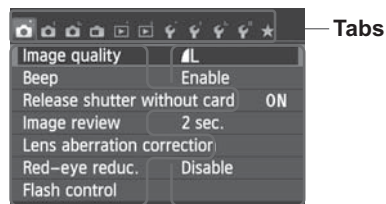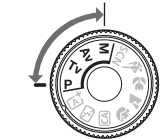


Menu items Menu settings

Image-Recording Quality

- Select [**1**: Image quality], then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

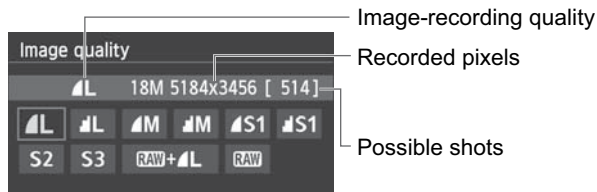

Picture Style ☆

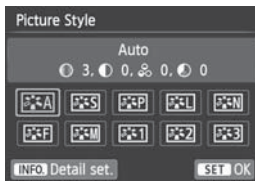


- Press the <▼> button.
- Press the <◀▶> key to select the Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <M> (Neutral) and <F> (Faithful), see page 96.

Q Quick Control

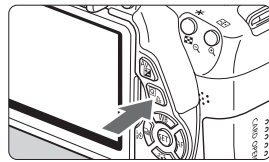


- Press the <Q> button.
- ▶ The Quick Control screen will appear.

Basic Zone Modes




Creative Zone Modes

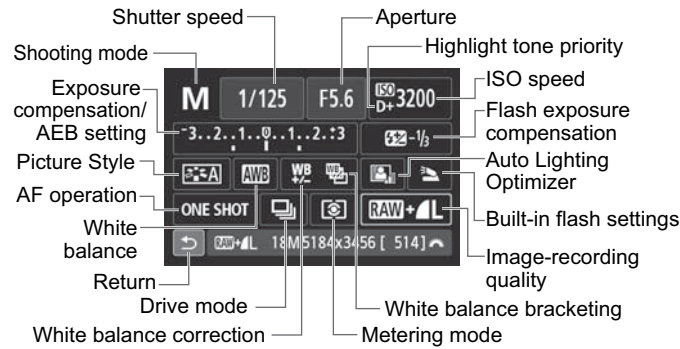


- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <Q> key to select a function, then turn the <DIAL> dial to set it.


Nomenclature

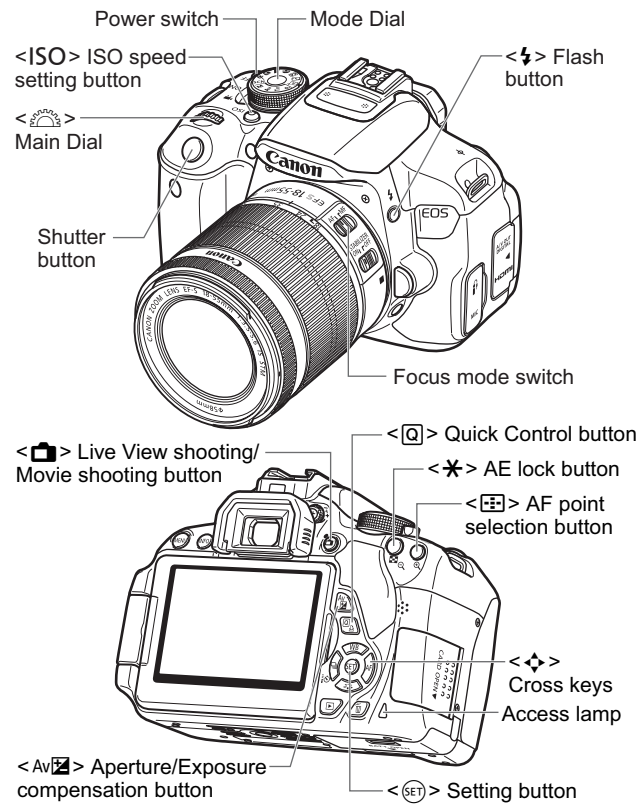


Shooting Settings

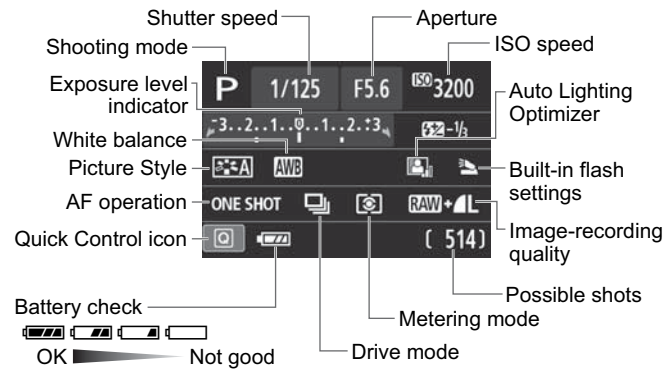

Viewfinder Information

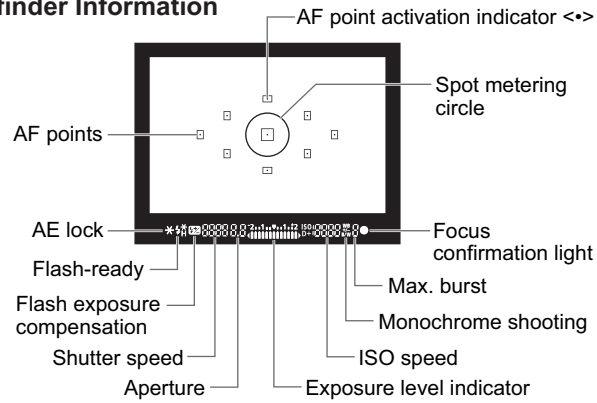

Basic Zone Modes

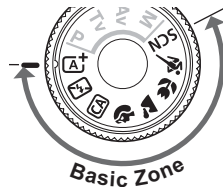

All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- | | |
|------------------------|--------------------------|
| Scene Intelligent Auto | Sports |
| Flash Off | SCN Special scene |
| Creative Auto | Night Portrait |
| Portrait | Handheld Night Scene |
| Landscape | HDR Backlight Control |
| Close-up | |


- At the **SCN** position, press the **<Q>** button, select the shooting mode icon with **<◀▶>** key, and turn the **<◀▶>** dial to set the shooting mode.

⚡ Using the Built-in Flash

Basic Zone Modes

If necessary, the built-in flash will be raised and fire automatically in low-light or backlit conditions (except in the **<📷>** **<🌄>** **<🏃>** **<🌃>** **<🌃>** modes).

Creative Zone Modes

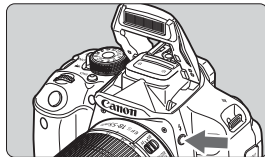

- Press the **<⚡>** button to raise the built-in flash, then shoot.

Creative Zone Modes



You can change the camera settings as desired to shoot in various ways.

P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the $\langle A^+ \rangle$ mode.

- Set the Mode Dial to $\langle P \rangle$.

Tv: Shutter-priority AE



Tv 1/125 F5.6 ISO 400

- Set the Mode Dial to $\langle Tv \rangle$.
- Turn the $\langle \text{Shutter Speed} \rangle$ dial to set the desired shutter speed, then focus the subject.
- ▶ The aperture will be set automatically.
- If the aperture display blinks, turn the $\langle \text{Aperture} \rangle$ dial until it stops blinking.


Av: Aperture-priority AE




Av 1/125 F5.6 ISO 400

- Set the Mode Dial to $\langle Av \rangle$.
- Turn the $\langle \text{Aperture} \rangle$ dial to set the desired aperture, then focus the subject.
- ▶ The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the $\langle \text{Shutter Speed} \rangle$ dial until it stops blinking.

AF: AF Operation ☆

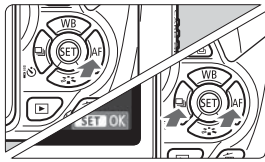

 - Set the lens focus mode switch to <AF>.
- Press the <▶ AF> button.
- Press the <◀▶> key or turn the <☀> dial to select the AF operation, then press <SET>.



ONE SHOT (One-Shot AF):

For still subjects

AI FOCUS (AI Focus AF):

Switches the AF operation automatically


AI SERVO (AI Servo AF):

For moving subjects


AF Point ☆




- Press the <☒> button.

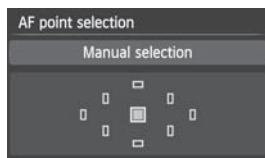

- Press the <◀◆> key to select the AF point.
- While looking through the viewfinder, you can select the AF point by turning the <☀> dial until the desired AF point flashes in red.
- Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.


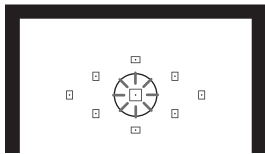


ISO: ISO Speed ☆

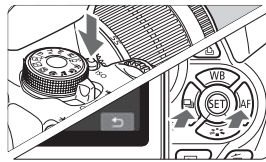

- Press the <ISO> button.
- Press the <◀▶> key or turn the <ISO> dial to select the ISO speed, then press <SET>.
- When [AUTO] is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

Drive Mode

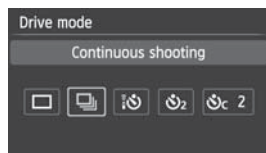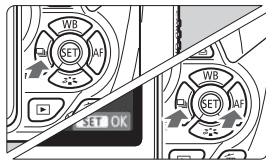

- Press the <◀▶> button.
 - Press the <◀▶> key or turn the <ISO> dial to select the drive mode, then press <SET>.
- : Single shooting
▶▶ : Continuous shooting
⌚ : Self-timer:10 sec./Remote control
⌚₂ : Self-timer:2 sec.
⌚_C : Self-timer:Continuous


Live View Shooting



- Press the button to display the Live View image.



- Press the shutter button halfway to focus.

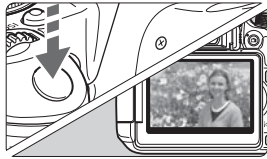


- Press the shutter button completely to take the picture.


● Battery Life with Live View Shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots

Shooting Movies

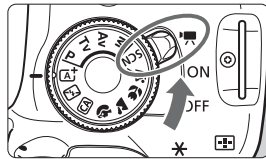


- Set the power switch to .
- Set the Mode Dial to any shooting mode except .

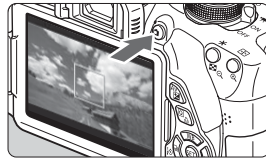

- Press the button to start shooting a movie.
- To stop movie shooting, press the button again.

Recording movie

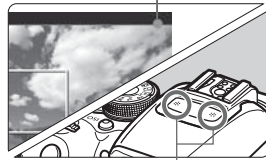

Microphone

Image Playback

