



**Sony Handycam- How to REFORMAT/CLEAR THE HARD DRIVE**  
After using the video cam, you need to DELETE all the footage/  
files from the camera hard drive/memory- MANDATORY




**STEP 1- Push MENU> Then Push SETUP....**

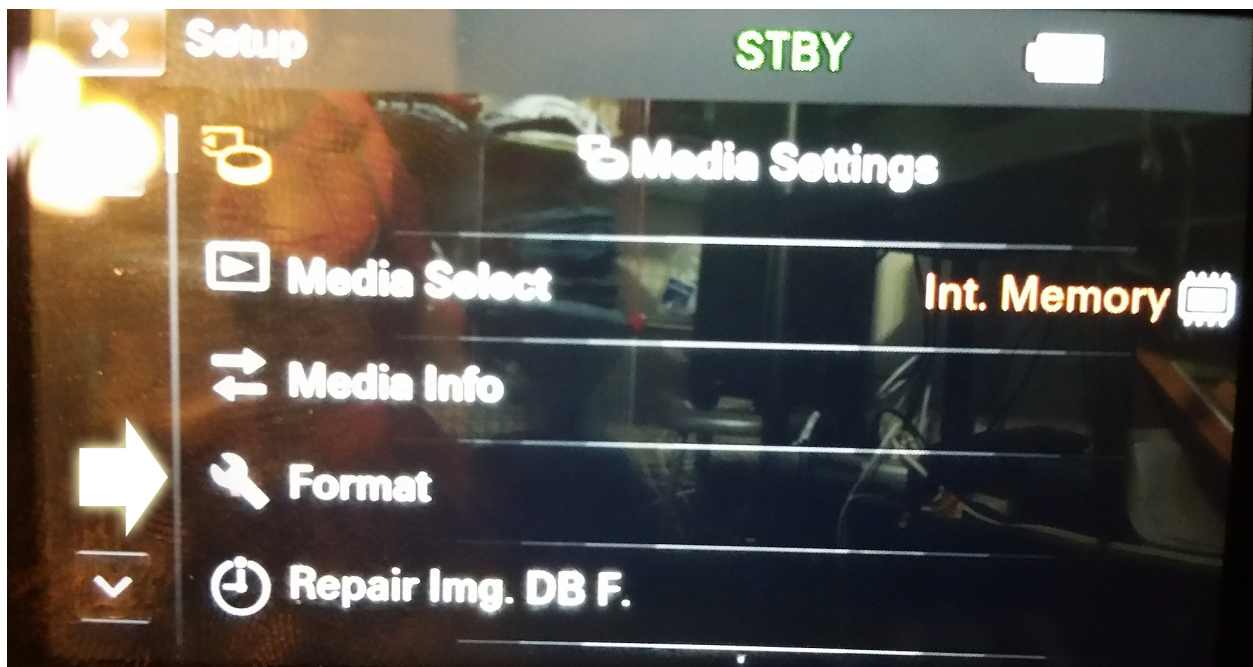

**STEP 2- Push FORMAT**

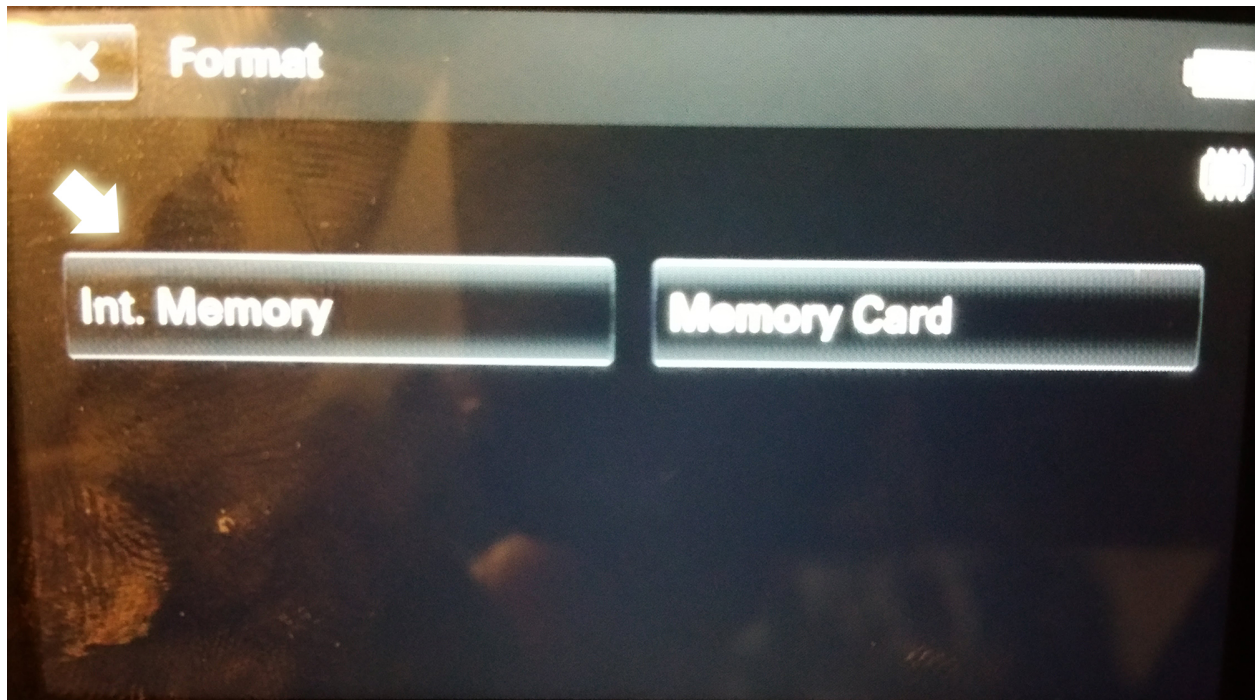

**Push> INTERNAL MEMORY**

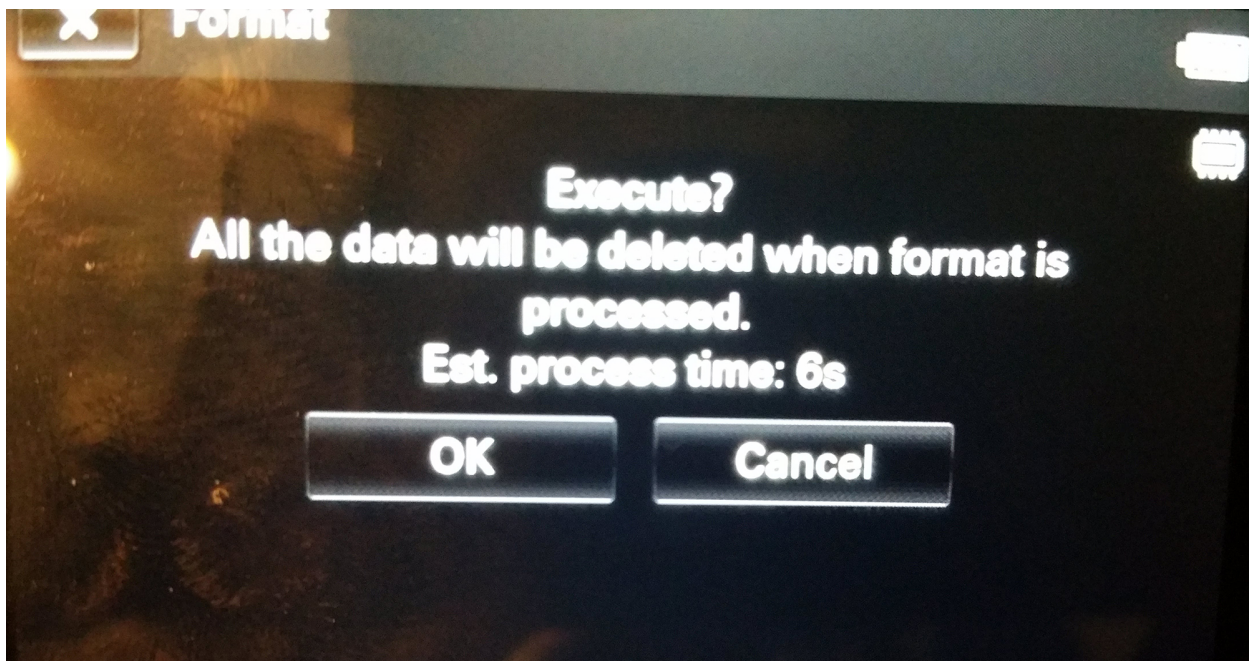

**Push>OK Internal Memory Is Now Clear**