

Sony Handycam-How to set the White Balance


WHAT IS IT? White balance is the process of calibrating/fixing your camera to show colors accurately under varying light conditions. Think of it as making sure the color white is always white so that your image doesn't have blue or red tints.

HOW? Many cameras come with automatic white balance and it works pretty well most of the time. Sometimes though you'll want to adjust it yourself. You can do this a few different ways the easiest of which are presets. The most common presets are sunny/outside, and fluorescent/indoors.




These balance the image color based on those general lighting conditions.


STEP 1- Push MENU> Then Push CAMERA/MIC

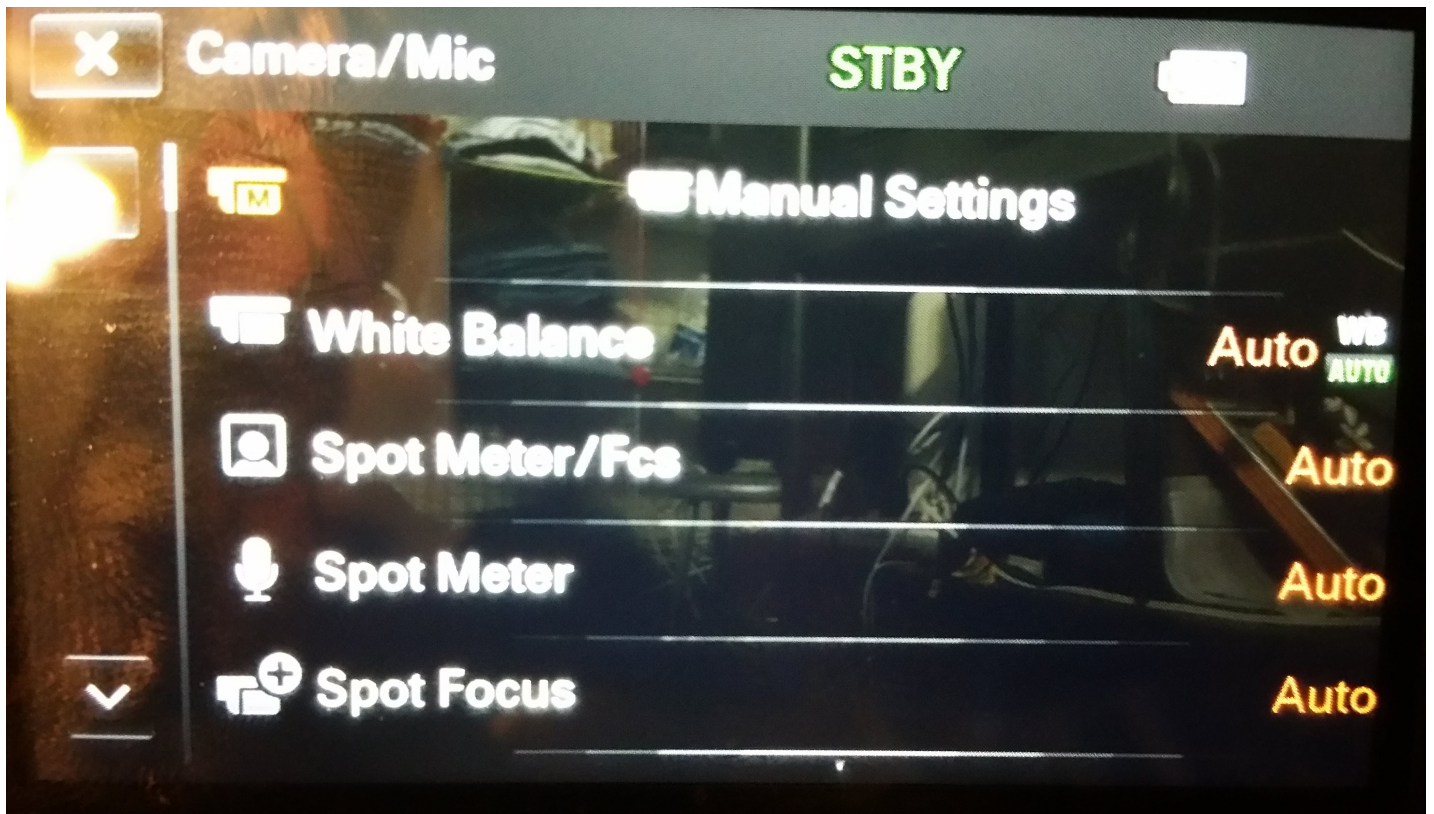


STEP 2- PUSH -WHITE BALANCE

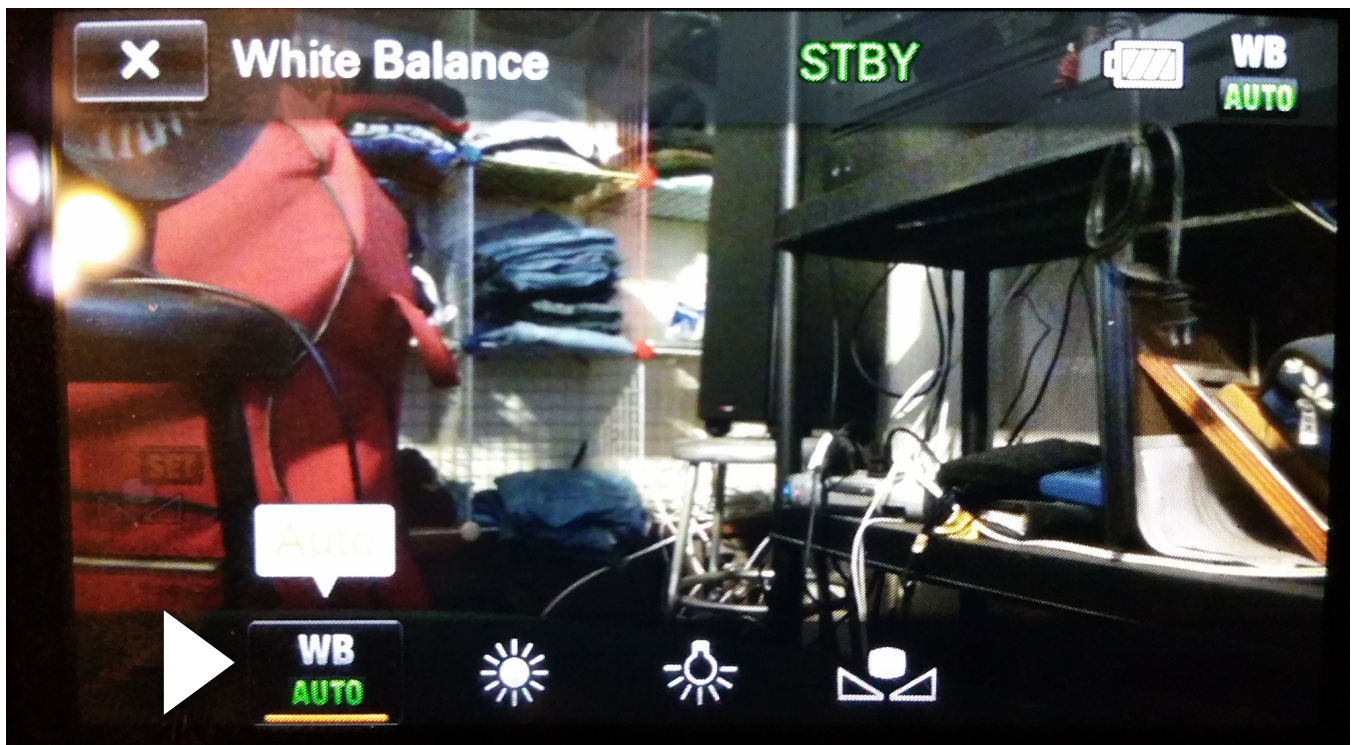

White Balance SET to AUTOMATIC (works pretty good)

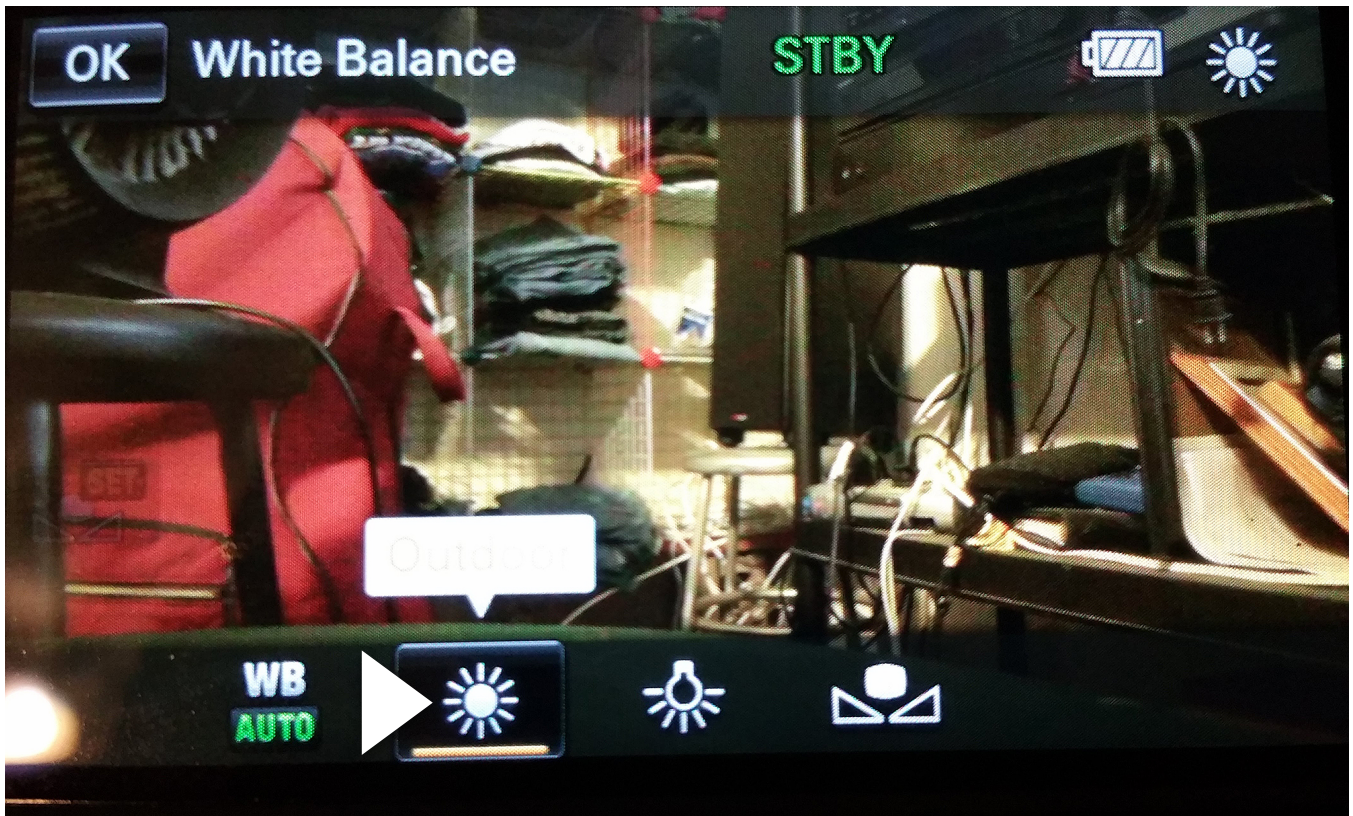

White Balance SET to OUTDOOR

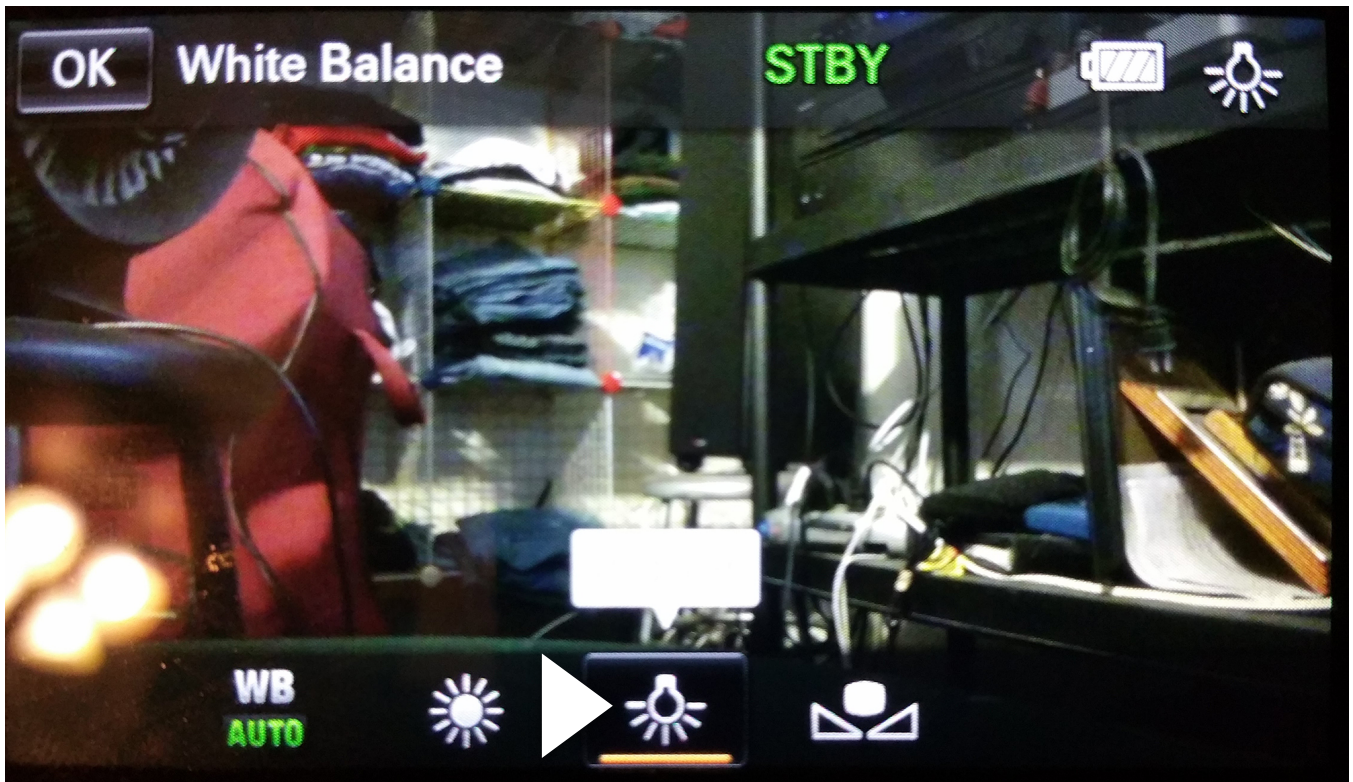

White Balance SET to Indoor